Data Sheet

Manual Force Test Stands TSA & TSAH

32-1051 REV 0

The lever operated TSA is ideal for quick-action testing of up to 750 lbF of tensile or compressive force. Made of rugged components, this test stand is durable enough for the factory floor, yet precise enough for laboratory environments. The loading lever can be positioned in 30° increments and the adjustable precision ground rack and pinion mechanism assures smooth, precise motion through 6 in of travel. The test stand includes adjustable travel stops and a frictional low force brake. It is available in vertical and horizontal orientations. Use this test stand with Mark-10 force gauges and gripping fixtures to create a complete push/pull testing system.

Specifications

•	
Load capacity:	750 lbF [3750 N]
Maximum travel:	
With travel stops:	2.75 in [69.9 mm]
Without travel stops:	6 in [152.4 mm]
Loading method:	Rack and pinion, lever can be positioned in 30° increments
Travel rate:	3 in [76.2 mm] per lever rev.
Weight:	
TSA	16 lb [7.3 kg]
TSAH	13 lb [5.9 kg]
Included accessories:	Tool kit, medium hook, large hook, compression plate, force
	gauge mounting hardware
Warranty	3 years (see individual statement for further details)


Optional Equipment


optional Equi	
Digital travel display	6 in [150 mm] travel, 0.0005 in [0.01 mm] resolu-
TSA001	tion, 0.001 in [0.03 mm] accuracy, SPC output
	for data collection.
Horizontal / wall mounting kit	Converts the TSA to a TSAH
TSA002	
BGI mounting kit	If a BGI indicator with remote sensor is used with
AC1004	the TSA/TSAH, the BGI can be securely mounted
	to the side of the column with this adapter



The TSA and TSAH are shown testing the peel force of a sample, with a Series EG digital force gauge, and film & paper grips



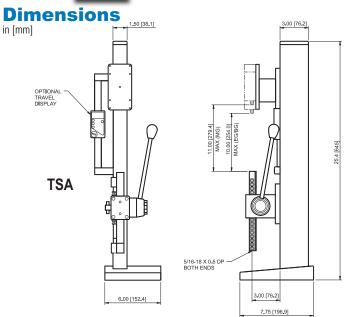

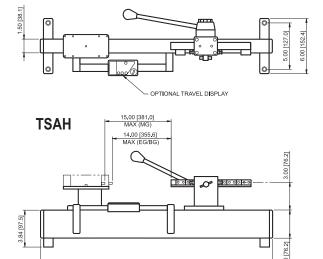

Ordering Information

Model No.	Description
TSA	Test stand, lever-operated, 750 lbF, vertical
TSAH	Test stand, lever-operated, 750 lbF, horizontal
TSA001	Digital travel display for TSA/TSAH
TSA002	Horizontal / wall mounting kit
AC1004	Mounting kit, BGI to TSA/TSAH





